Robot operation

Set Up



Attach the floating cable to the power supply.

Into the pool



Put the Pool Cleaner into the pool. Release the Pool Cleaner and let it sink to the floor of the pool. Make sure that the floating cable is free of any obstructions.



Position the power supply at least 3m/10ft away from the edge of the pool.

Out of the pool



Turn the power supply ON. The Pool Cleaner will now operate until it has reached the end of the cleaning cycle.

Operation





Maintenance

Periodic filter cleaning

Dismantle the 2 ultra-fine filter panels of the outer basket according to the following steps:







Clean the filter panels with a hose.





Assemble the filter panels.

Insert the clean filter basket and close the filter cover.

Cleaning the impeller

If you notice debris trapped in the impeller:

 \triangle Unplug the power supply before servicing

Clean the debris trapped in the impeller opening, according to the following steps:

2

Using a short screwdriver

open the 2 screws.



If the debris is not reachable follow the next steps.



Pull the impeller cover backwards to release it. Clean the debris trapped around the impeller. Assemble the impeller cover.

θ

Coil the cable and store in a cool, dry place on the Caddy. Do NOT store the robot where it will be exposed to direct sunlight, excessive heat or to frost.