




RV 5470

Spare parts

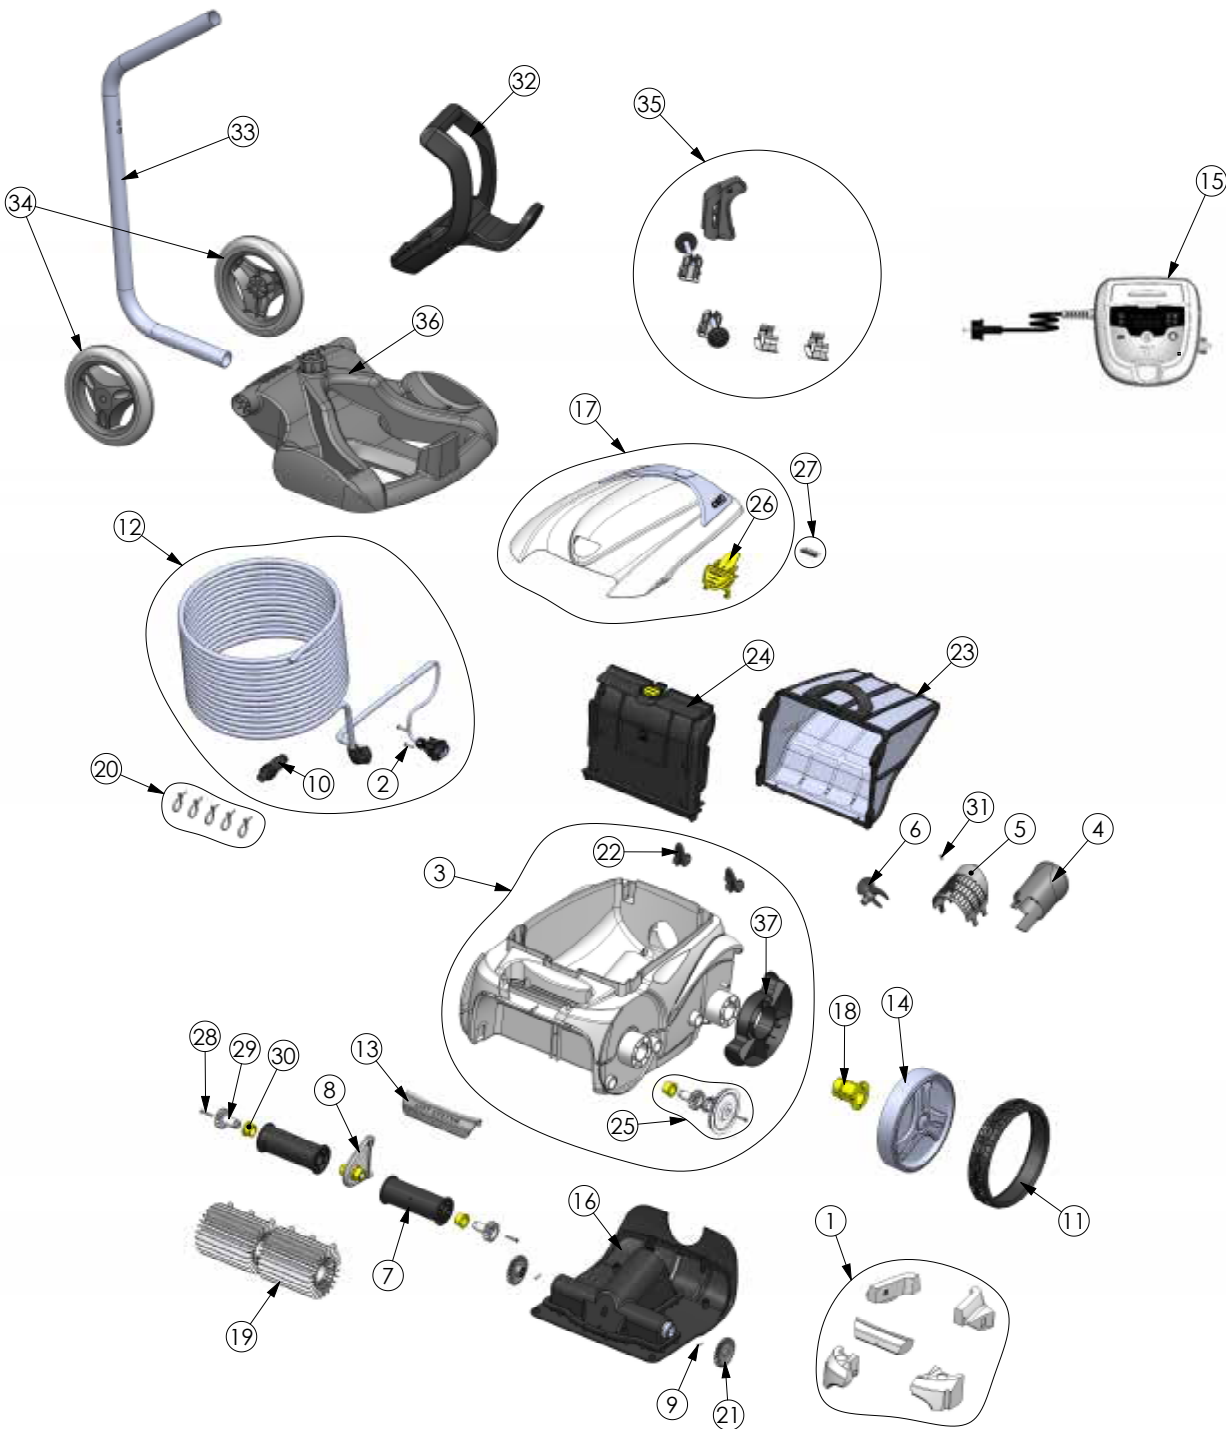

Position	Description	Reference
1	Float	R0539700
2	Screw 4*16mm (set of 5)	R0608500
3	Main housing 4wd white	R0531201
4	Flow outlet	R0517500
5	Motor screen	R0517600
6	Propeller	R0517000
7	Brush roller	R0517400
8	Roller support white	R0518701
9	Motor block shaft pin (set of 5)	R0567800
10	Floating cable plug	R0565600
11	Tire large black zodiac	R0636201
12	Floating cable 18m	R0516800
13	Handle ral9022 ls	R0636501
14	Rim large r9022 zodiac	R0636001
15	Control unit type 3v	R0637100
16	Motor block type c	R0638000
17	Cover rv5470	R0638400
18	Wheel bushing zodiac	R0636700
19	Brush (set of 2)	R0638800
20	Floating cable clamp (set of 5)	R0567900
21	Drive gear (set of 2)	R0518800
22	Roller (set of 2)	R0518100
23	Fine filter v	R0636600
24	Filter canister support	R0517700
25	Transmission	R0517200
26	Cover latch grip pms108	R0638700
27	Screw 4*12 mm (set of 5)	R0516700
28	Screw 4*25 mm (set of 5)	R0638900
29	17 Gear (*2)	R0639000
30	Outer bearing (*2)	R0639100
31	Screw 2.9*9.5 Mm (set of 5)	R0639200
32	Caddy handle	R0565000
33	Caddy tube	R0565200
34	Caddy wheels (*2)	R0565100
35	Caddy accessories	R0564900
36	Caddy base	R0564800
37	Cover wheels protection	R0540300